



©2007 Research In Motion Limited. All Rights Reserved. The BlackBerry and RIM families of related marks, images, and symbols are the exclusive properties of Research In Motion Limited. RIM, Research In Motion, BlackBerry, "Always On, Always Connected" and the "envelope in motion" symbol are registered with the U.S. Patent and Trademark Office and may be pending or registered in other countries. All other brands, product names, company names, trademarks, and service marks are the properties of their respective owners.

MAT-16908-001 | PRINTSPEC-020 | SWD-286866-0928101937-001 | RAV20CW



Tips

BlackBerry 7130e Smartphone



Start me up

Thank you for choosing a BlackBerry® smartphone! See the *Getting Started Guide* that came with your device for step-by-step instructions for your device.

Setup checklist




 




Complete the following tasks to set up your device. See the *Getting Started Guide* that came with your BlackBerry® device for help.

- Insert the battery
- Charge the battery
- Complete the setup wizard

Keys and features










Typing tips

- To capitalize a letter, hold the letter key until the capitalized letter appears or press the  key and press the letter key.
- To type the alternate character on a key, hold the  key and press the character key.
- To type a symbol, press the  key and the  key. To view more symbols, press the  key again. Type the letter that appears below the symbol.
- To type an accented or special character, hold the letter key and roll the trackwheel up or down. Click a character.
- To turn on number lock, hold the  key and press the  key.
- To turn off number lock, press the  key.







Save time

See the *Getting Started Guide* that came with your BlackBerry® device or click **Help** on your device for more information about using your device.

Home screen tips

- To return to the Home screen, press the  key.
- To lock the keyboard, on the Home screen, hold the  key.
- To unlock the keyboard, press the  key and the  key.
- To lock the device, set a password. On the Home screen, hold the  key.
- To unlock the device, type your password. Press the  key.
- To switch between the Default and Vibrate notification profiles, on the Home screen, hold the  key.

Phone tips

 








- To make a call from the Home screen, type the phone number. Press the  key.
- To end a call, press the  key.
- To answer a call, press the  key.
- To turn on or turn off mute during a call, press the  key.
- To turn on or turn off the speakerphone during a call, press the  key.
- To adjust the volume during a call, roll the trackwheel.
- To call a highlighted contact or phone number, press the  key.

Try this

Assign a speed dial number to a key.


1. In the phone, click the trackwheel.
2. Click **View Speed Dial List**.
3. Click an unassigned key.
4. Click **New Speed Dial**.
5. Click a contact.
6. Click **Add Speed Dial To <contact name>**.

Message tips









- To move up a message, press  .
- To move down a message, press  .
- To move to the top of a message list, press  .
- To move to the bottom of a message list, press  .
- To highlight adjacent messages, hold the  key and roll the trackwheel.
- To compose a message from a message list, press the  key.
- To reply to a message, press the  key.
- To reply to all, press the  key.
- To forward a message, press the  key.

Try this

Copy text in a message and paste it into another application.

1. In a message, place the cursor before the text that you want to copy.
2. Press the  key and roll the trackwheel.
3. Click the trackwheel.
4. Click **Copy**.
5. Place the cursor where you want to paste the text.
6. Click the trackwheel.
7. Click **Paste**.

Browser tips

- To follow a link, click the link. Click **Get Link**.
- To move to a specific web page, press the  key.
- To insert a period (.) in the Go To dialog box, press the  key.
- To insert a slash mark (/) in the Go To dialog box, press the  key and the  key.
- To hide the banner on a web page, press the  key.
- To view the banner on a web page, press the  key.
- To add a bookmark, on a web page, press the  key.
- To open the bookmark list, on a web page, press .
- To stop loading a web page, in the browser, press the **Escape** key.
- To close the browser, hold the **Escape** key.





Try this

Move through a web page line by line.

1. On a web page, click the trackwheel.
2. Click **Select Mode**.

To select only links and fields as you move through a web page, click the trackwheel. Click **View Mode**.

Organizer tips



 
 


- To move to the next day, week, or month in the calendar, press the  key.
- To move to the previous day, week, or month in the calendar, press the  key and the  key.
- To convert a measurement in the calculator, type a number. Click the trackwheel. Click **To Metric** or **From Metric**. Click a conversion type.
- To change the status of a task in the task list, highlight a task. Press the  key.
- To search for a contact in a list of contacts, type the contact name or initials separated by a space.

Try this

Assign a ring tone to a contact.

1. In the address book, highlight a contact.
2. Click the trackwheel.
3. Click **Edit**.
4. Click the trackwheel.
5. Click **Add Custom Phone Tune**.
6. Set a ring tone.
7. Click the trackwheel.
8. Click **Save**.

Media tips

- To zoom in to a picture, press .
- To zoom out from a picture, press .
- To zoom to the original picture size, press .
- To rotate a picture, press the  key.
- To pause a slide show, press the  key.
- To resume a slide show, press the .

Try this

Use a picture as your Home screen background.

1. In the media application, click a media type.
2. Click a media folder that contains pictures.
3. Click **Open**.
4. Highlight a picture.
5. Click the trackwheel.
6. Click **Set As Home Screen Image**.

To clear the picture from the Home screen, click the trackwheel. Click **Reset Home Screen Image**.